

**The Lullabuddy™ Speaker is Bluetooth® enabled.  
To pair with another Bluetooth® device, follow these steps:**

1. Turn the Lullabuddy speaker power switch on.
2. Press & hold the center Play/Pause button until the blue light flashes.
3. On your mobile device, open Bluetooth®, Find & select Lullabuddy on the list of devices available to pair.
4. Start music on your mobile device & it will play through the Lullabuddy speaker.
5. To stop streaming music, simply press & hold the Play/Pause button to de-activate Bluetooth®.
6. If Lullabuddy doesn't appear on your mobile device, try turning Bluetooth® off & back on again. Then turn Lullabuddy off & back on again. Now try the Bluetooth® pairing sequence again.
7. Once you have paired a device to the Lullabuddy you should not have to pair it again.
8. If Lullabuddy still doesn't show up on your mobile device list, make sure it is not paired with another device that is nearby.

#### Specifications

Output: RMS 3W THD=10%  
Frequency Response: 150-18000HZ[ +/-3dB]  
Signal and Noise Ratio of Power Amplifier > 80dB  
Loud Speaker: 1.77 Inches (External Diameter 45mm), Impedance: 4 Ohms  
Power Supply: 3.7V/800mA

TF Card: Internal card pre-loaded with music

The lithium battery in this speaker has been tested and passed according to section 38.3 of the UN Manual of Tests and Criteria (UN Transportation Testing) and is safe for general mailing and air transport.

When battery dies, plug the Lullabuddy in to charge it and turn power switch off and back on again to start speaker playing.

**This product is not a toy and is not intended for use by child.  
This product is not intended for use in crib.  
For adult use only.**

Visit <https://lullabuddy.com> for full song and musician credits

Visit <https://lyricpartners.com/lullabuddy> for user's guide

© Lyric Partners, LLC

FCC-ID NO. :2AQ5G-GMAE1801



# lullabuddy®

## User Manual

#### Functions

1. Power: On/Off selection
2. Shuffle: On: Songs play in shuffle mode  
Off: Songs play in sequence
3. Timer: On: Speaker turns off after one hour  
Off: Speaker plays continuously
4. USB Port: Connect USB cable to power speaker or charge battery
5. Previous/Rewind: Press once to go to previous track  
Press and hold to rewind
6. Volume Down: Press to decrease volume
7. Next/Fast Forward: Press once to go to next track  
Press & hold to fast forward
8. Play/Pause/Bluetooth® : Press once to start or pause  
Press & hold to activate Bluetooth®
9. Volume Up: Press to increase volume
10. Indicator Light: Solid blue when power is on  
Flashing red when battery charge is low  
Solid red when charging

